ON AIR CLOCK

User Manual

(Rev 2.0)

SEDE DI BOLOGNA:
VIA CADUTI DI SABBIUNO 6/F • 40011 ANZOLA EMILIA • BOLOGNA • ITALY
PHONE: +39 051 736555 • +39 051 736154 • FAX: +39 051 736170
e-mail:info@axeltechnology.com • http://www.axeltechnology.com

SEDE DI BERGAMO:
VIA ITALIA, 1
24030 MEDOLAGO • BERGAMO • ITALY

SEDE DI LUCCA - Broadcast Audio Devices s.r.l.
VIALE MARCONI, 86
55045 PIETRASANTA • LUCCA • ITALY

SEDE DI ROMA:
VIA SALARIA, 223 C
00015 MONTEROTONDO • ROMA • ITALY

CONTENT

1 INTRODUCTION 3

2 SETUP AND CONFIGURATION 3

2.1 SERVER SIDE: 3
2.2 DEVICE SIDE: 8
2.3 SERVER-CLIENT PAIRING 9

3 ONAIR CLOCK REMOTER SETUP 11

4 USING ONAIR CLOCK SERVER 14

4.1 ACTIVE 14
4.2 BLACKLIST 16
4.3 EDITOR 17

5 ONAIR CLOCK REMOTER 22

6 FINAL CONSIDERATION AND AXEL TECHNOLOGY CONTACT 23

1 INTRODUCTION

Thank you for purchasing Axel Technology new release of On-Air clock, the software that allows you to always have a look on time, countdowns or countups that you want to watch on every display you need in your radio or tv studio.
This innovative product gives you the chance to have an analogic or digital performant clock in your server, controlled from every client PC workstation in your broadcasting network.

Prerequisites:

1 PC with Windows OS
HDMI TV or Monitor
Usb Mouse and/or USB keyboard and/or USB hub
OnAirClock dongle
WIFI access point (if using a WIFI onairclock device)
OnAirClockSetup.exe installation sw
OnAirClockRemoterSetup.exe installation for Remoter service
OnAirClockDevice - any android device or a Smart TV Dongle with:
DroidVncServer.apk (android app to control your screen outputs on a remote browser of your LAN & WIFI Network)
OnAirClock.apk (android app to install OnAirClock on your device)

2 SETUP AND CONFIGURATION

The PC with Windows OS will act as the time server. Time impulse will be pushed through the LAN (or WIFI) to the OnAirClockDevice that will display Clock and other information on the HDMI video output.

2.1 SERVER SIDE

1) Install OnAirClockSetup.exe on the Windows PC (installation may require additional libraries such as Microsoft .NET Framework) as shown in following steps:

Click on Next

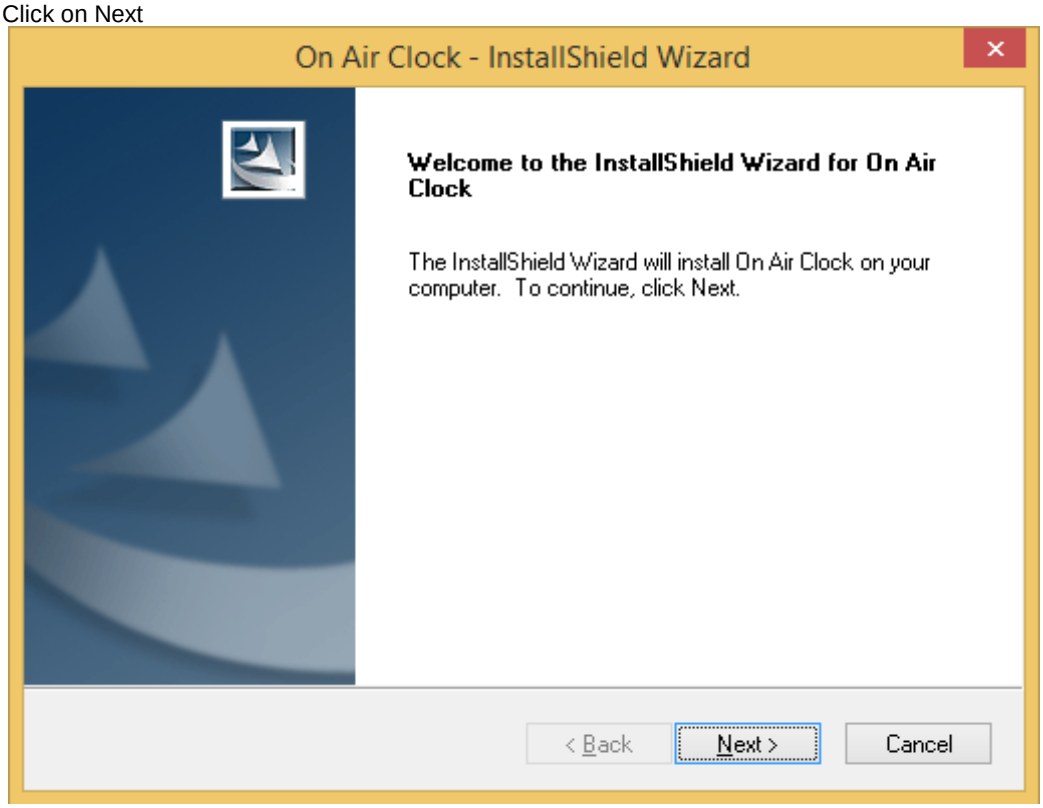
On Air Clock - InstallShield Wizard
Welcome to the InstallShield Wizard for On Air Clock
The InstallShield Wizard will install On Air Clock on your computer. To continue, click Next.
< Back
Next >
Cancel

Click on Next

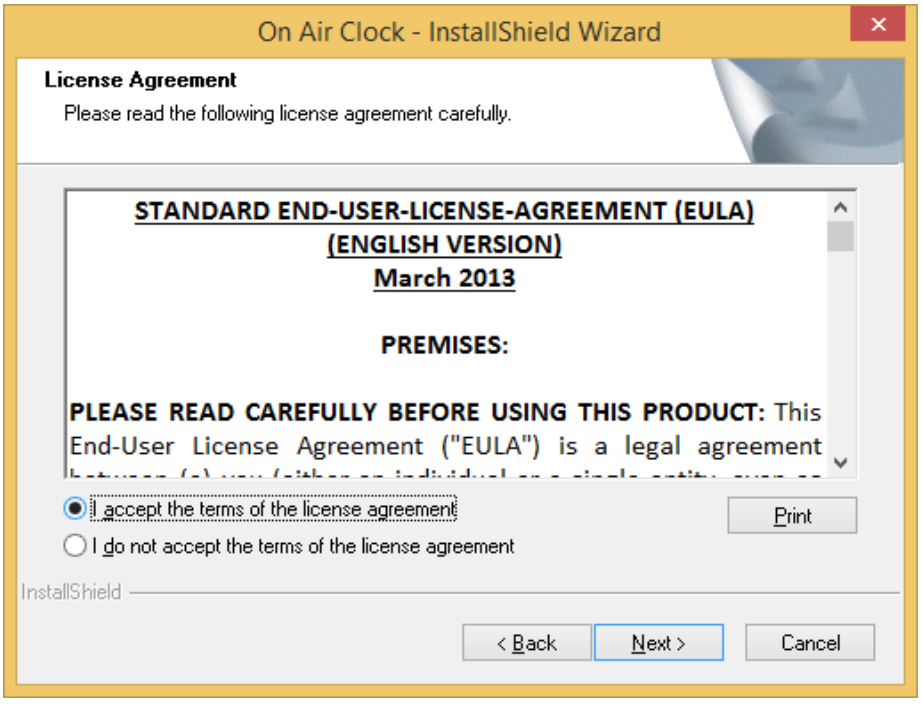
On Air Clock - InstallShield Wizard
License Agreement
Please read the following license agreement carefully.
STANDARD END-USER-LICENSE-AGREEMENT (EULA)
(ENGLISH VERSION)
March 2013
PREMISES:
PLEASE READ CAREFULLY BEFORE USING THIS PRODUCT: This End-User License Agreement ("EULA") is a legal agreement
I accept the terms of the license agreement
I do not accept the terms of the license agreement
Print
InstallShield
< Back
Next >
Cancel

Click on Yes and wait…

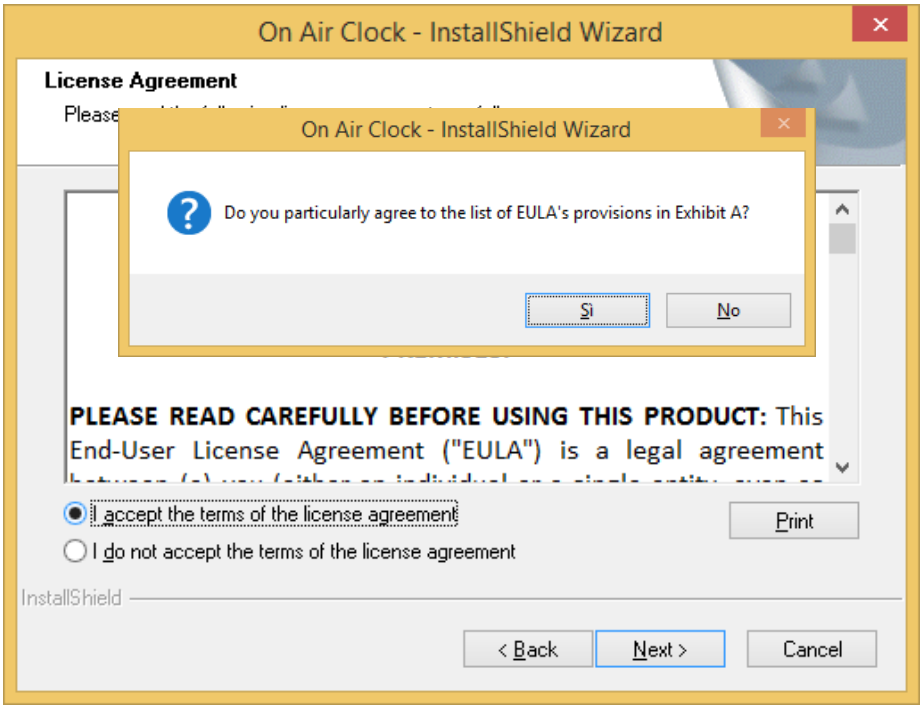
On Air Clock - InstallShield Wizard
License Agreement
On Air Clock - InstallShield Wizard
Do you particularly agree to the list of EULA's provisions in Exhibit A?
Si
No
PLEASE READ CAREFULLY BEFORE USING THIS PRODUCT: This End-User License Agreement ("EULA") is a legal agreement
I accept the terms of the license agreement
I do not accept the terms of the license agreement
Print
InstallShield
< Back
Next >
Cancel

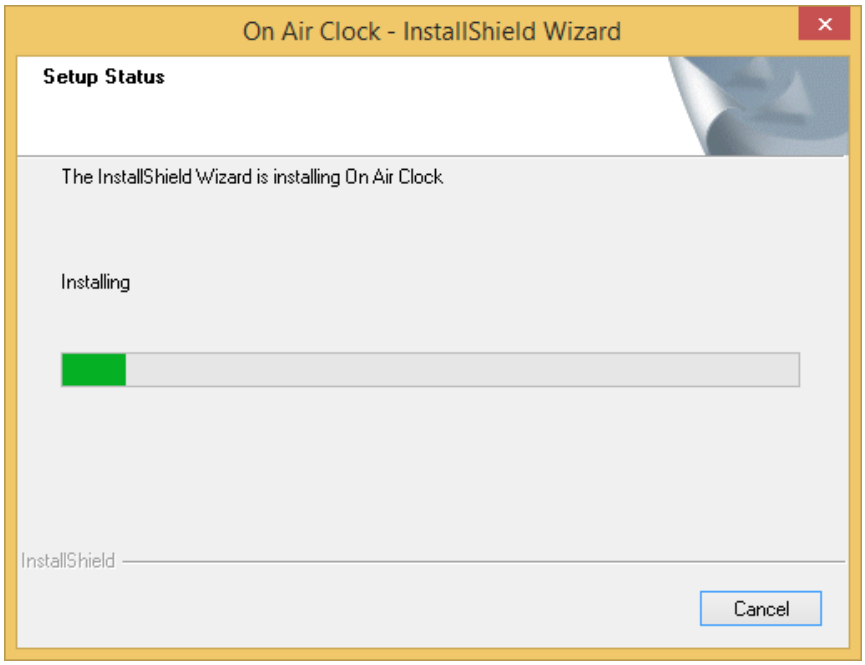

Click on Finish

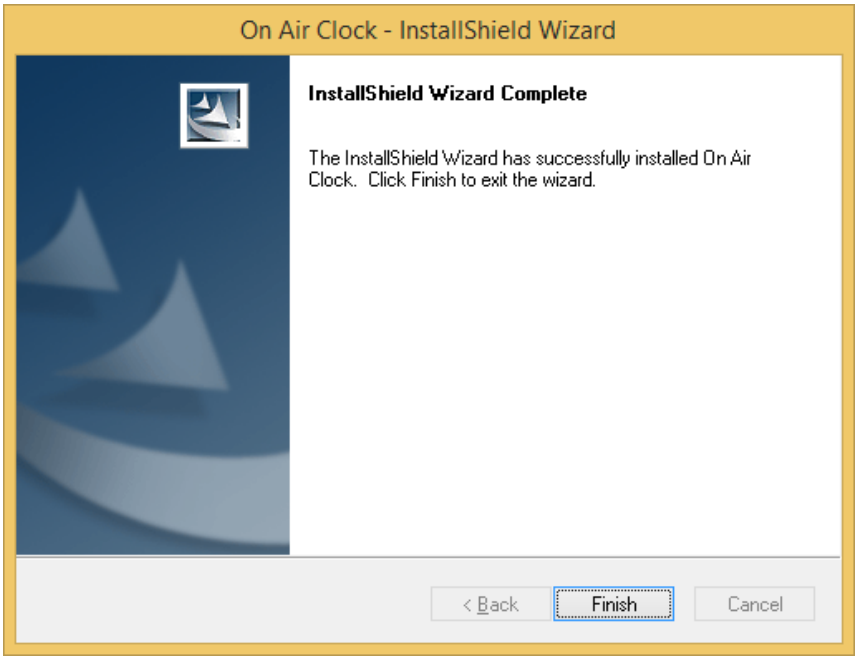
On Air Clock - InstallShield Wizard
InstallShield Wizard Complete
The InstallShield Wizard has successfully installed On Air Clock. Click Finish to exit the wizard.
< Back
Finish
Cancel

Click on OK

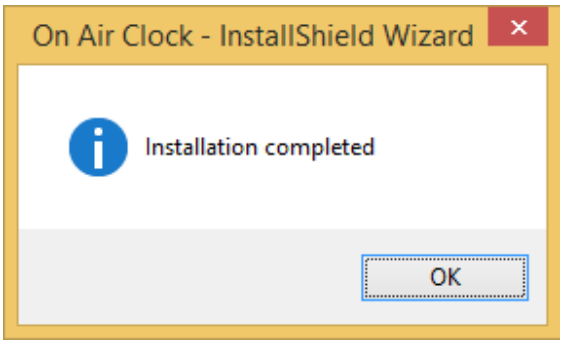

2) Connect the hardware dongle to a free USB port of the PC
3) Insert an incoming rule in the advanced option of windows firewall allowing all incoming connection on port 8090

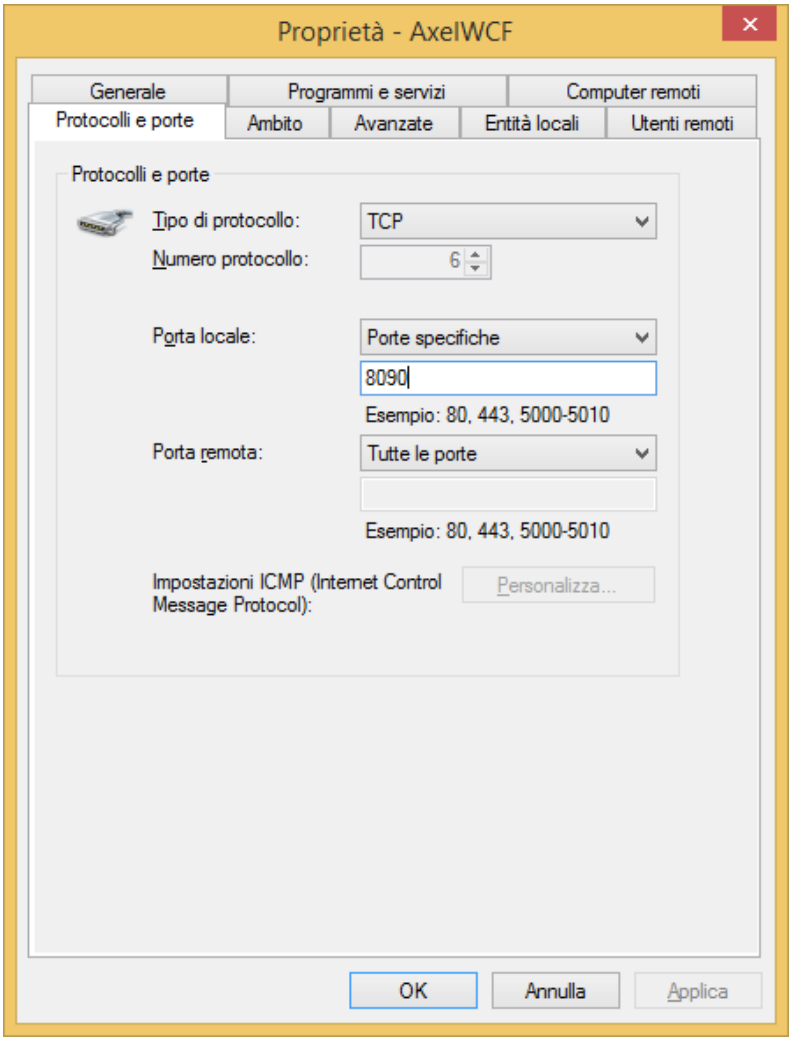

4) Run the Onairclock sw on the Windows PC

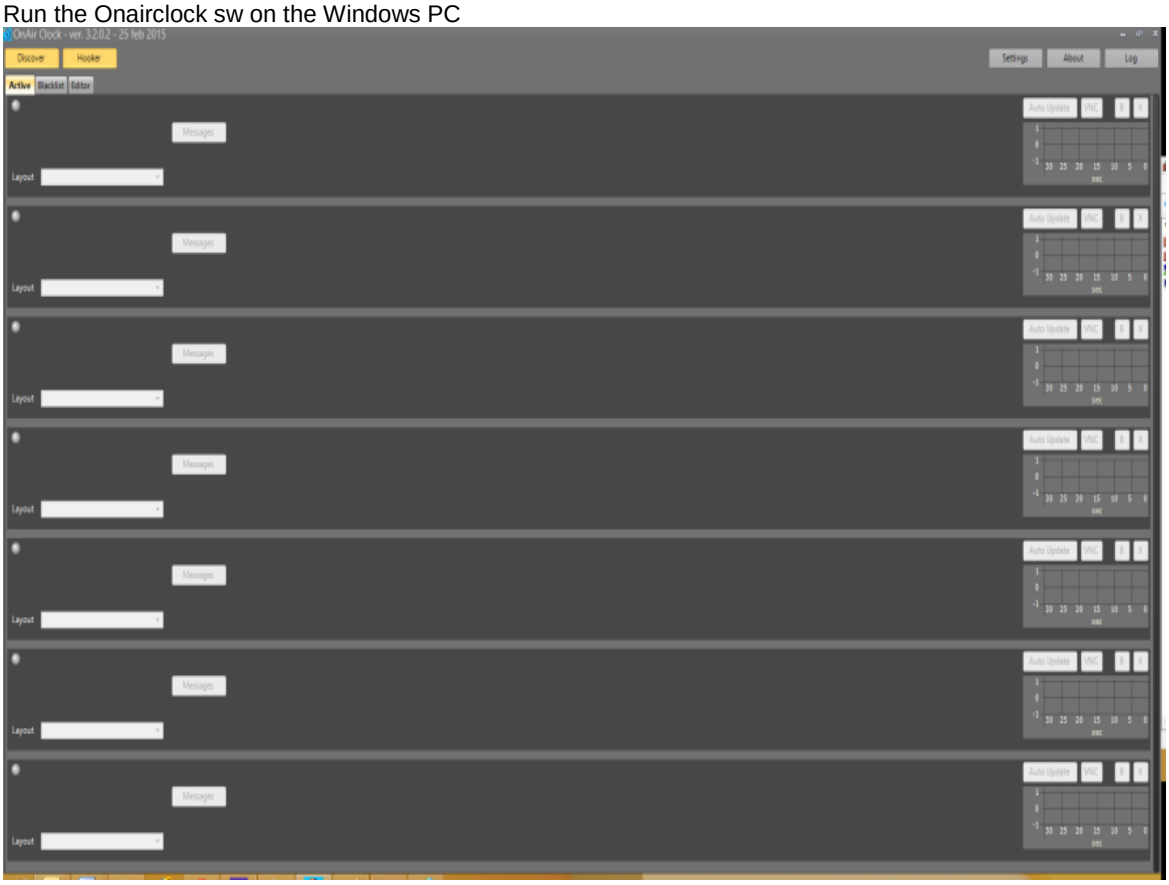

5) Open the settings panel and be sure that in the *IP Address* field the current IP of the Windows PC is displayed (if using multiple IPs or LAN cards, specify the IP on the subnet where the Access point and the OnAirClock device are connected)

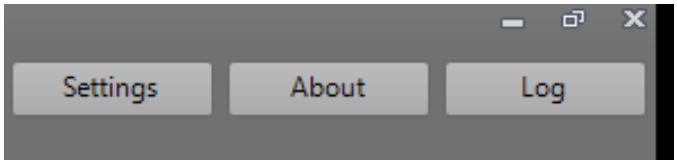

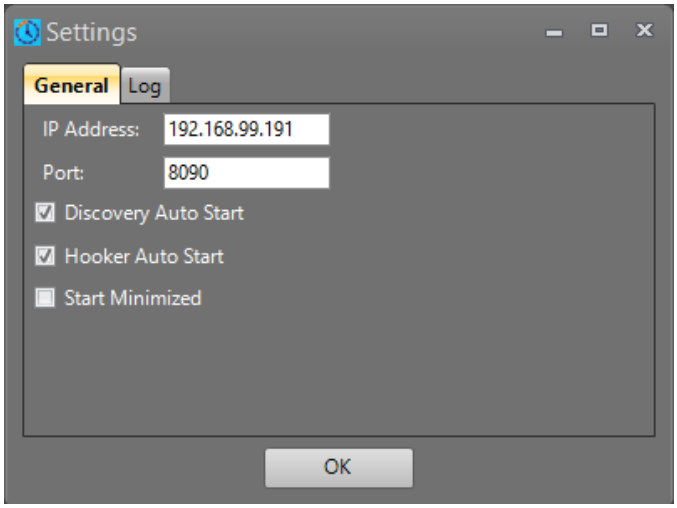

Onairclock software must be running 24/7. Eventually create a link in Windows Start menu to run Onairclock automatically on windows startup.

2.2 DEVICE SIDE

1) Connect the Onairclock Device to the HDMI monitor
2) Connect USB mouse and/or USB Keyboard (using a USB HUB) to the Onairclock device
3) Connect power using the USB power supply (sometimes USB coming from TV or monitor is not enough for the onairclock device)
4) On Startup, Onairclock will show a *DISCONNECTED* message (As the next picture shows on an android device). Right click to exit the app, then configure WIFI (or LAN) settings to connect correctly to your local network. DHCP and fixed IP configurations are possible.

OR

5) Restart The Onairclock device and verify that connection to local network is automatically established upon startup

2.3 SERVER-CLIENT PAIRING

On the windows PC a message box will appear, showing IP address and mac address of the Onairclock device. Type a Name for the specific device (like “ OAC1”) and click on OK.

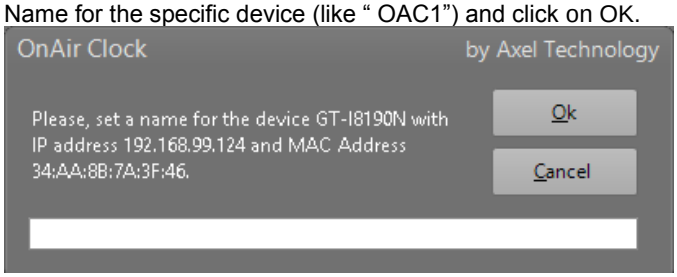
OnAir Clock
by Axel Technology
Please, set a name for the device GT-I8190N with IP address 192.168.99.124 and MAC Address 34:AA:8B:7A:3F:46.
Ok
Cancel

After a few seconds the device will appear in the *connected devices* list.

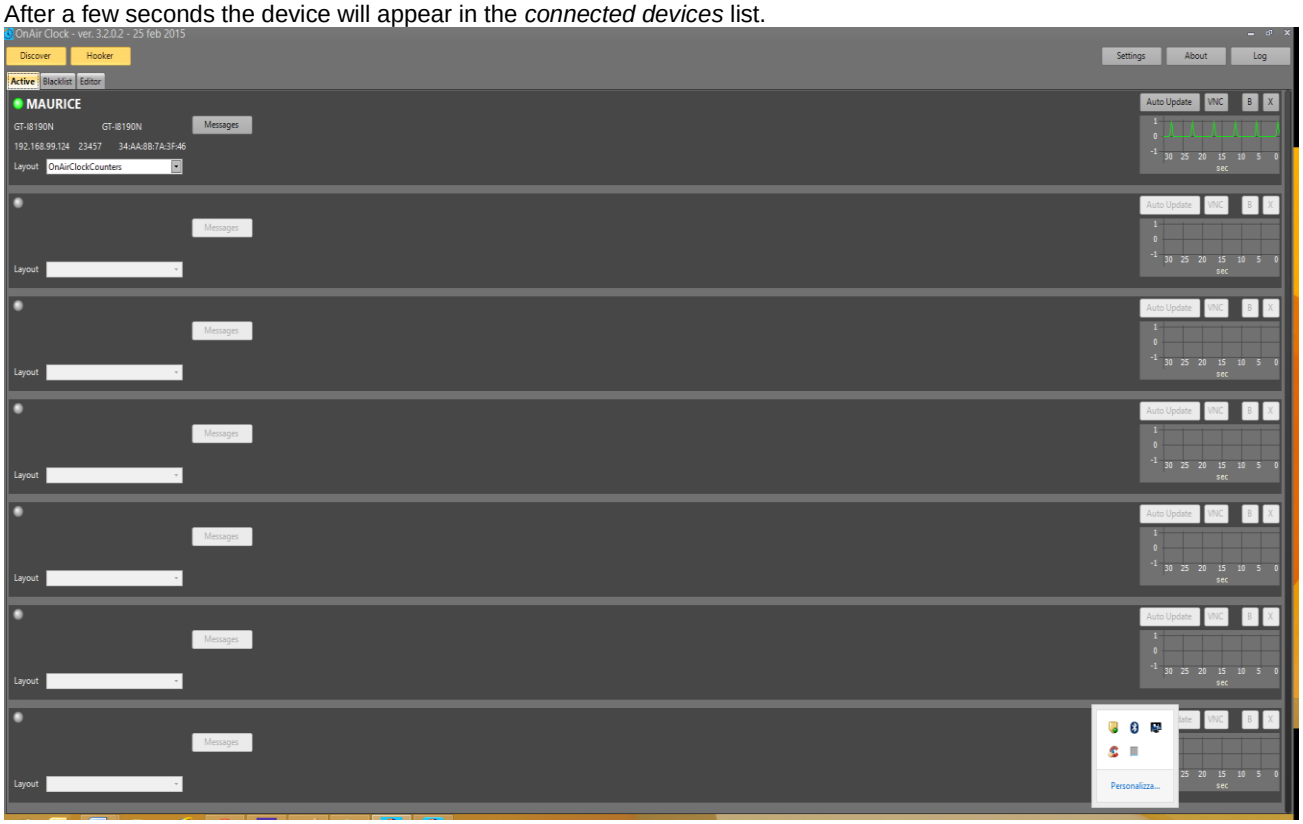

Select a default layout for the device from the list (OnairClock for example).

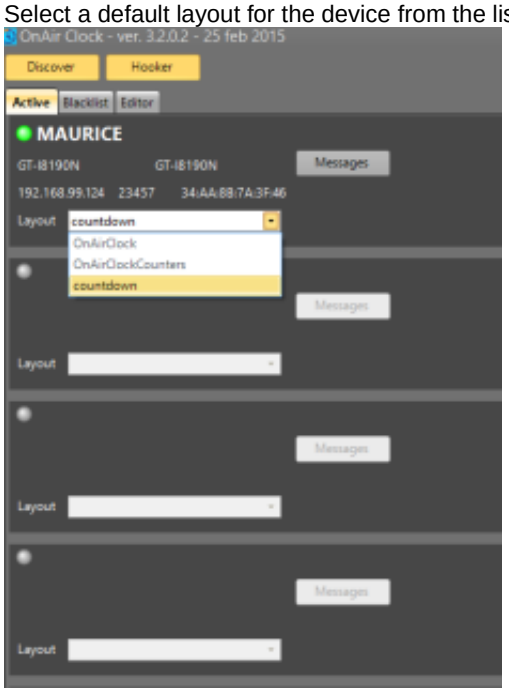

After a few seconds you will see the clock on the HDMI TV.

3 ONAIR CLOCK REMOTER SETUP

Open ‘OnAirclock Remoter.exe’

Click on Next

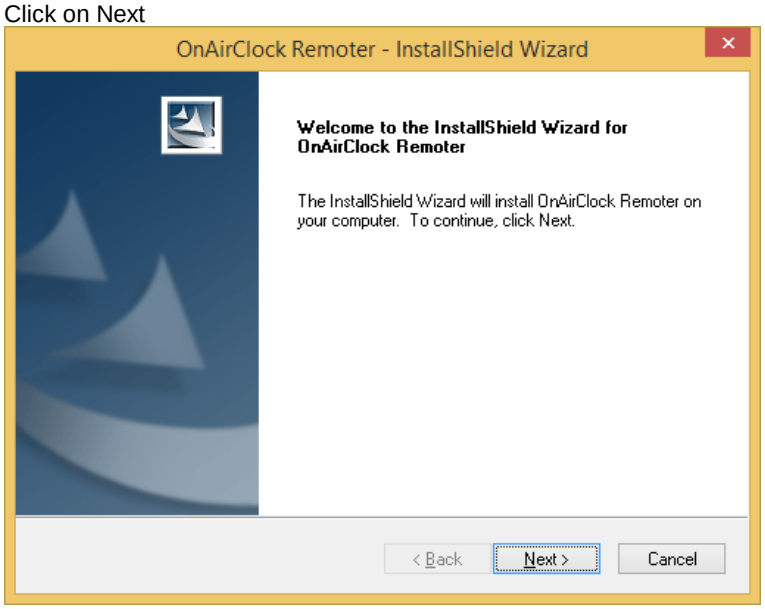
OnAirClock Remoter - InstallShield Wizard
Welcome to the InstallShield Wizard for OnAirClock Remoter
The InstallShield Wizard will install OnAirClock Remoter on your computer. To continue, click Next.
< Back
Next >
Cancel

Click on Next

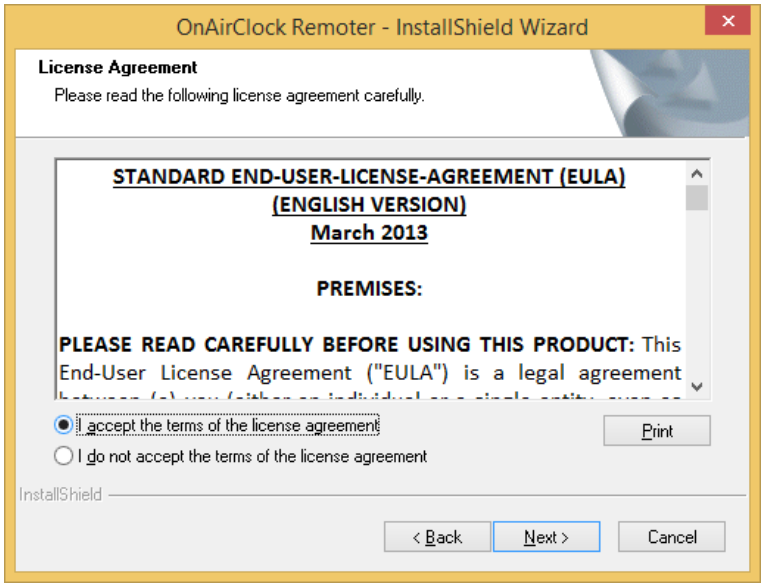
OnAirClock Remoter - InstallShield Wizard
License Agreement
Please read the following license agreement carefully.
STANDARD END-USER-LICENSE-AGREEMENT (EULA)
(ENGLISH VERSION)
March 2013
PREMISES:
PLEASE READ CAREFULLY BEFORE USING THIS PRODUCT: This End-User License Agreement ("EULA") is a legal agreement
I accept the terms of the license agreement
I do not accept the terms of the license agreement
Print
InstallShield
< Back
Next >
Cancel

Click on Yes

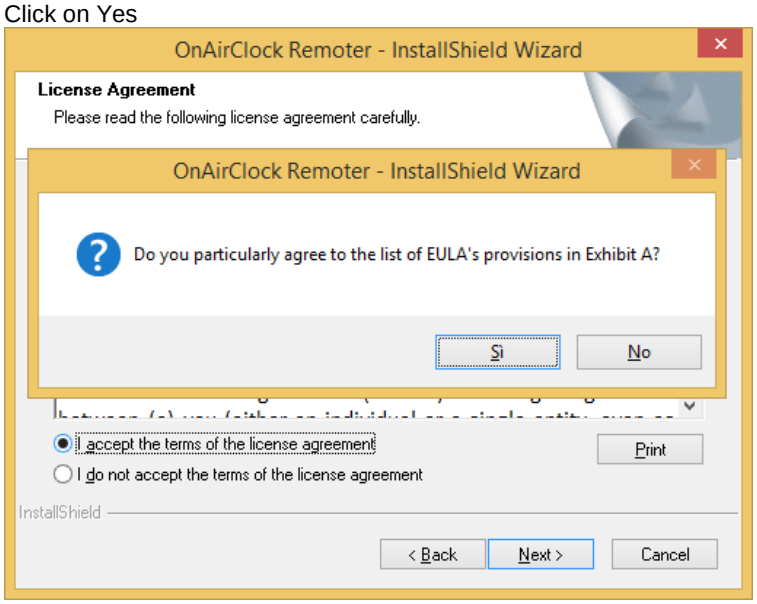
OnAirClock Remoter - InstallShield Wizard
License Agreement
Please read the following license agreement carefully.
OnAirClock Remoter - InstallShield Wizard
Do you particularly agree to the list of EULA's provisions in Exhibit A?
Sì
No
I accept the terms of the license agreement
I do not accept the terms of the license agreement
Print
InstallShield
< Back
Next >
Cancel

Click on Install

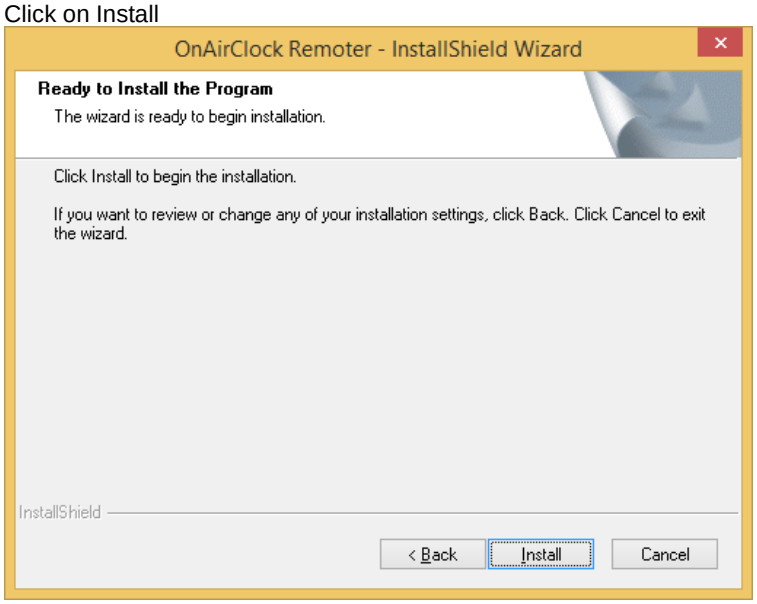
OnAirClock Remoter - InstallShield Wizard
Ready to Install the Program
The wizard is ready to begin installation.
Click Install to begin the installation.
If you want to review or change any of your installation settings, click Back. Click Cancel to exit the wizard.
InstallShield
< Back
Install
Cancel

Wait…

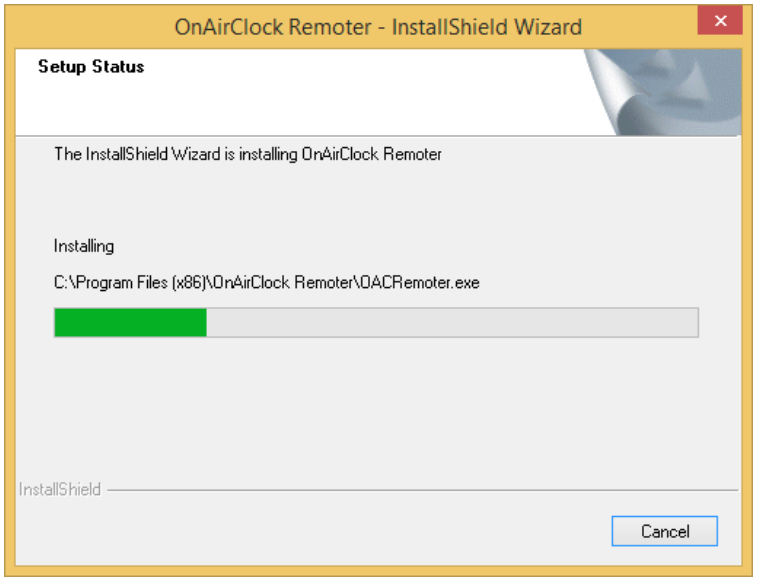

Click on Finish

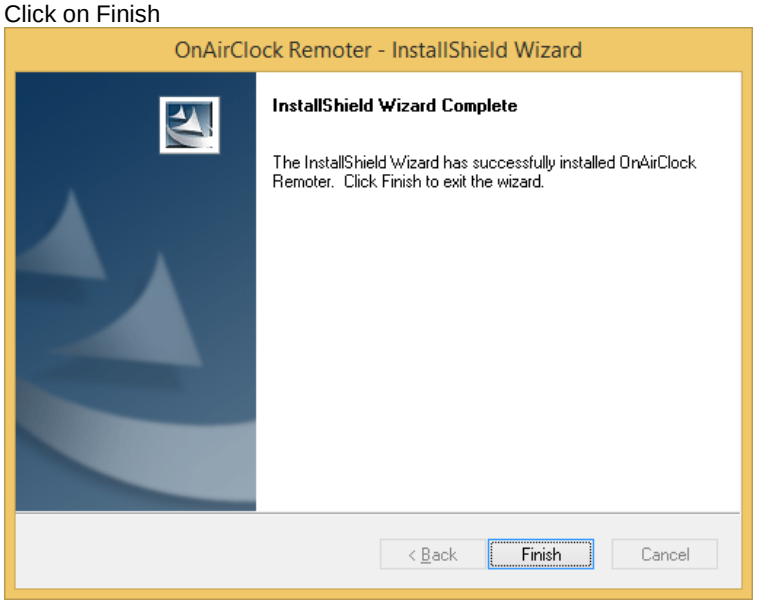
OnAirClock Remoter - InstallShield Wizard
InstallShield Wizard Complete
The InstallShield Wizard has successfully installed OnAirClock Remoter. Click Finish to exit the wizard.
< Back
Finish
Cancel

Click on Finish

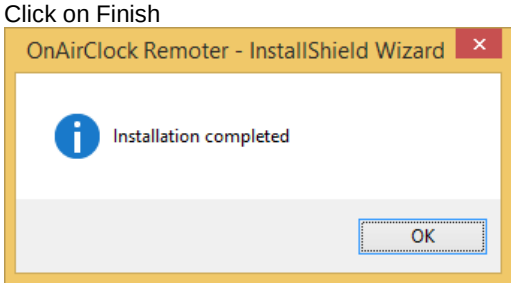

4 USING ONAIR CLOCK SERVER

In the server part software, you can find three different tabs:

- ACTIVE
- BLACKLIST
- EDITOR

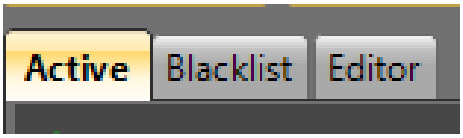

4.1 ACTIVE

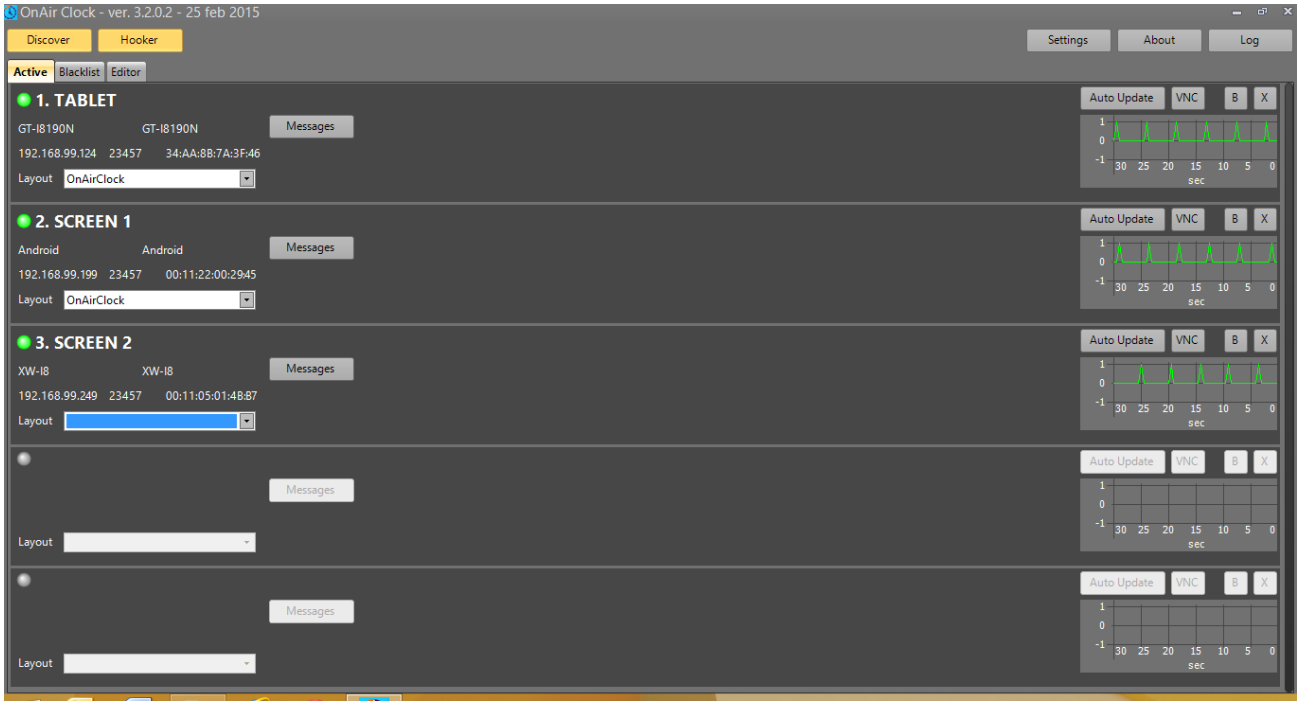

In this tab you have the control of all client devices connected to your network server. When you open the app for the first time on any OnAirClock network device, OnAirClock server detects for it and adds it in the available device list with a green led. If the light of the device is grey, it means the device is available but it is not running the app. So, to activate it just run the OnAirClock app on the device.

For each device you can select through 4 default messages to be shown in the page in the moment you prefer:

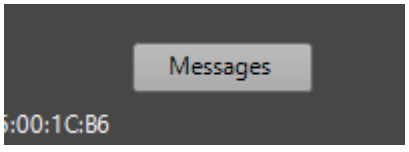

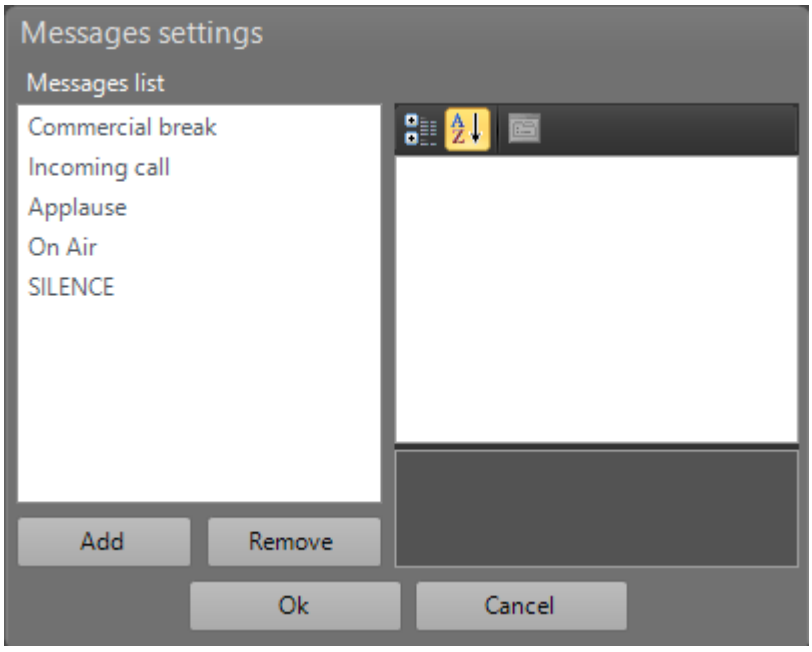

Commercial break (0)
Incoming call (1)
Applause (2)
On Air (3)
Customizable messages (…)

You can also add new messages or remove the existing one:
In the box at the right you can type the text you want to display.

Messages will be numbered from

For each device, in the left side of the current screen:

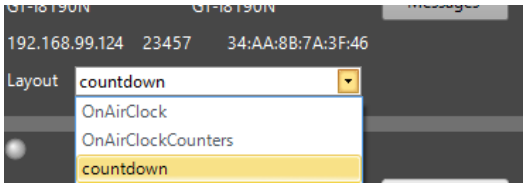

- Click on the drop down menu to select the layout you want to confirm. You have two default layouts, plus the other ones you create and change in the editor part.

For each device, in the right side of the current screen:

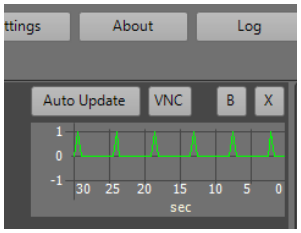

- Click on ‘Auto Update’ button to set the automatic update of the device release of OnAirClock app. The app update itself to the same release of the OnAirClock on the server.
- Click on ‘VNC’ button to have a remote control on the output device through a VNC service browsing on Internet Explorer. In this way you do not need any mouse or keyboard directly connected to the device.
- Click on ‘B’ button to put the device in the Black List.
- Click on ‘X’ button to delete the device from the Active list.

4.2 BLACKLIST

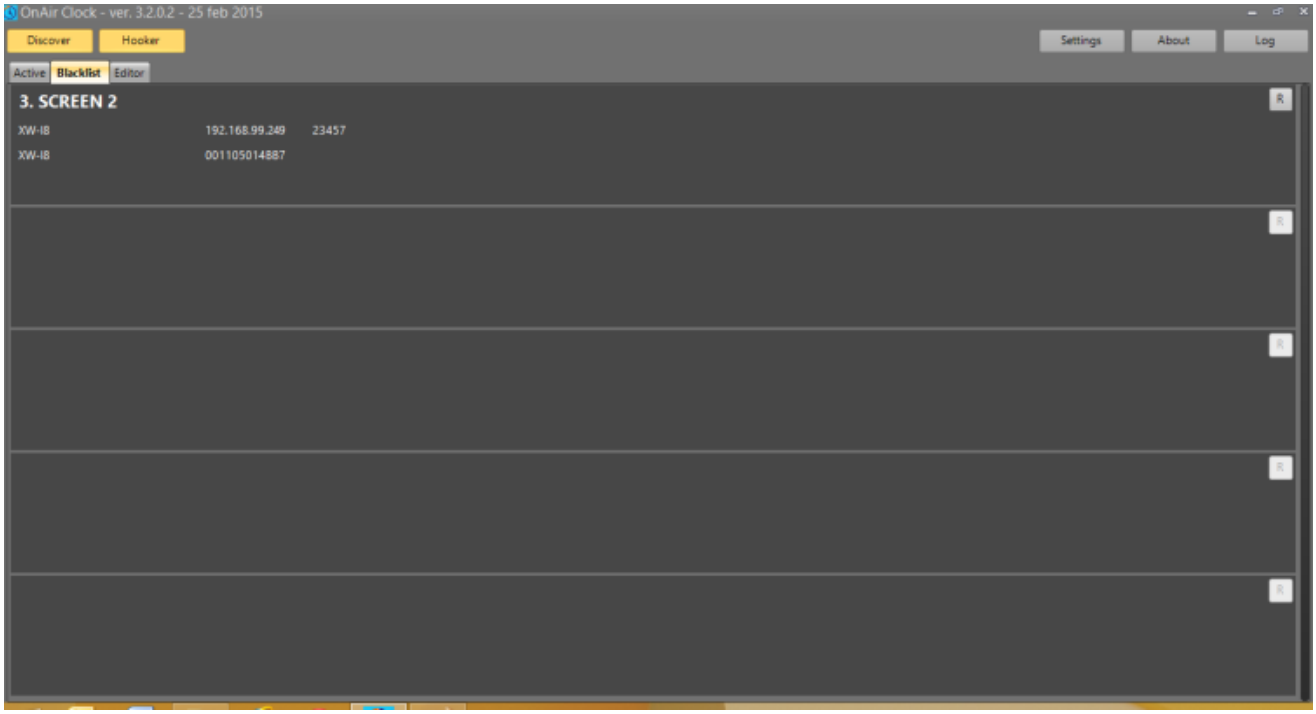

In this tab you have the control of all client devices you previously put in the Black List. For each device, in the right side of the current screen:

- Click on 'R' button to restore the device to the Active list.

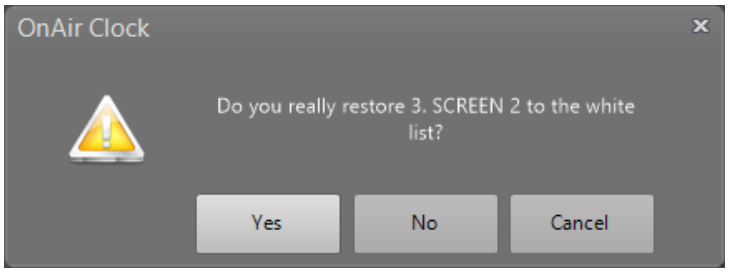

4.3 EDITOR

In this tab you can control all the available layouts,

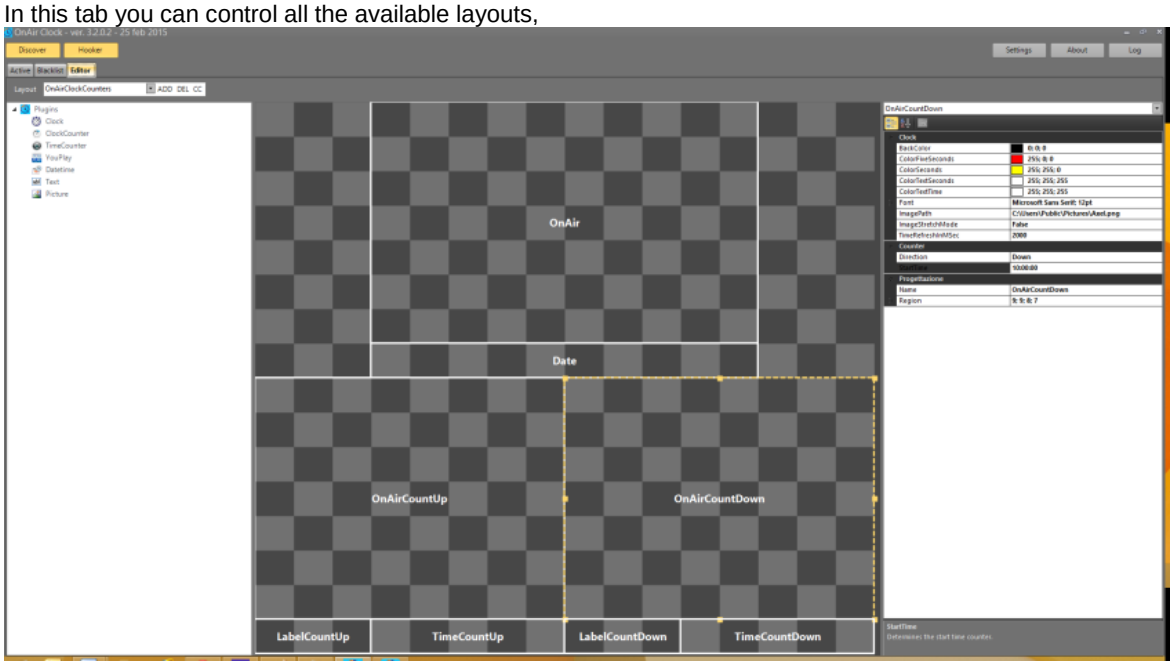

you can choose the layout you need from the layout drop-down menu.

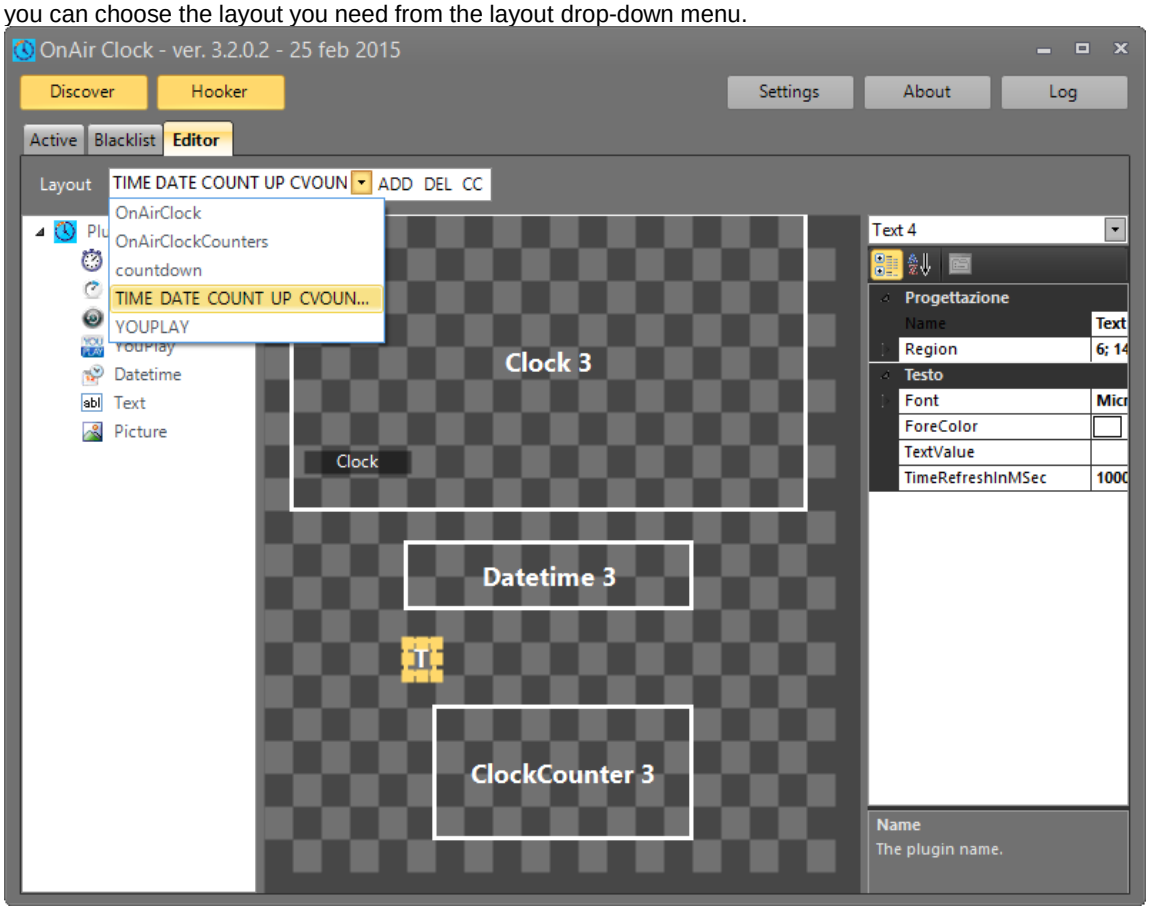

Next to the drop-down menu you have three buttons:
'ADD', 'DEL', 'CC' (Carbon Copy)

By clicking on 'ADD' you can add a new layout. Give it a name and set its width and height.
By clicking on 'DEL' you can delete the selected layout. Then confirm the removal.
By clicking on 'CC' you copy the selected layout. Give it a new name, then you can edit it.

In every layout you have the control of seven plugins and you can add them or remove them from the page.
Available Plugins are: Clock, Clock Counter, Time Counter, YouPlay, DateTime, Text, Picture.

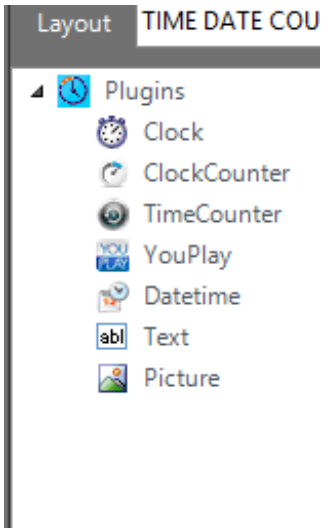

Drag and drop an item of the list into the composer

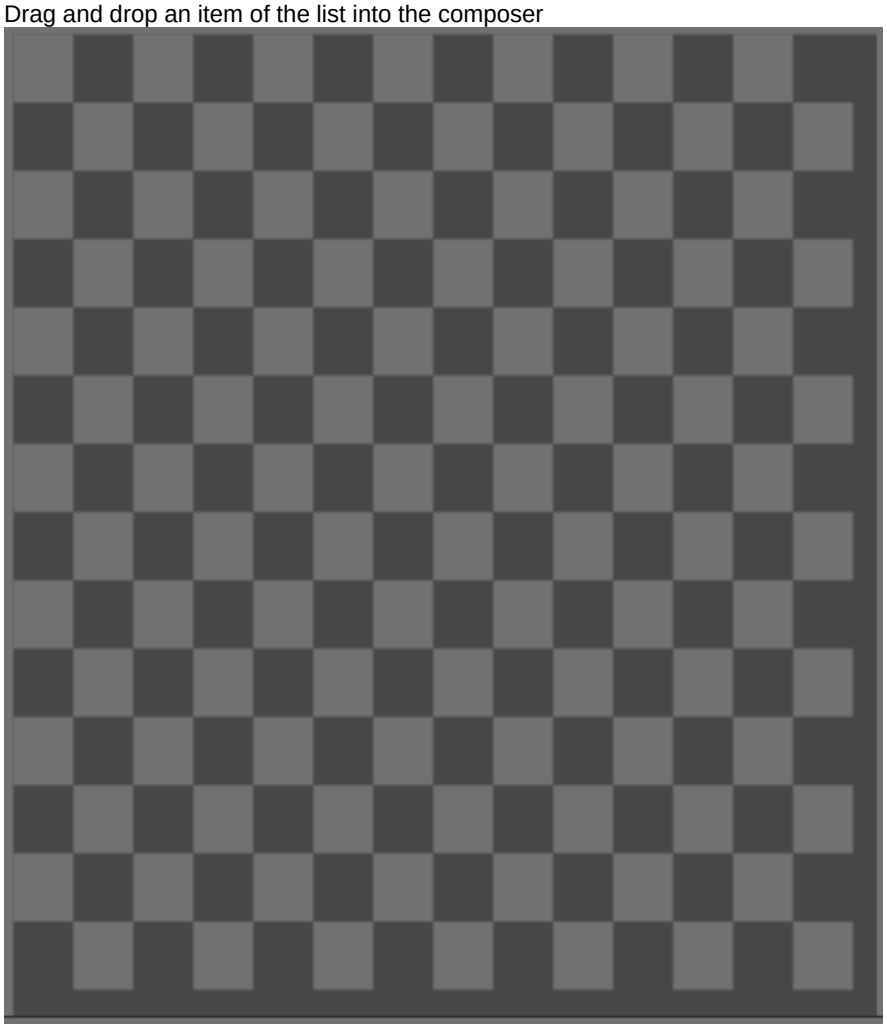

You can resize the item by dragging the handles shown on its edges and corners. You can move the item into the composer by drag & drop operation.

Clock: this plugin is a mix between an analogic and digital clock

Clock Counter: this plugin is a mix between an analogic and a digital count up or count down.
Important Parameters: click on the clock counter item into the composer and set the parameters appearing at the right side.
You can select the count up or count down mode for the counter and you can set the time starting point

Time Counter: this plugin is a digital count up or count down
Important Parameters: click on the time counter item into the composer and set the parameters appearing at the right side. You can select the count up or count down mode and the time starting point.

YouPlay: if you have a YouPlay running in your network, you can display its counters through this plugin.
Important Parameters: click on the YouPlay item into the composer and set the parameters appearing at the right side. You must type YouPlay Pc IP address, and which data you want to display on your OnAir Clock output.

DateTime: this plugin allows you to set a viewer for the current date time.

Text: this plugin allows you to set a customizable text you can put all over the page.
Important Parameters: click on the text item into the composer and set the parameters appearing at the right side. You can type the text value to display

Picture: this plugin allows you to set a picture you want to display in the page.

For each object, in the right side, you can decide the refresh time in milliseconds.

Two Examples of layouts and two output screens..

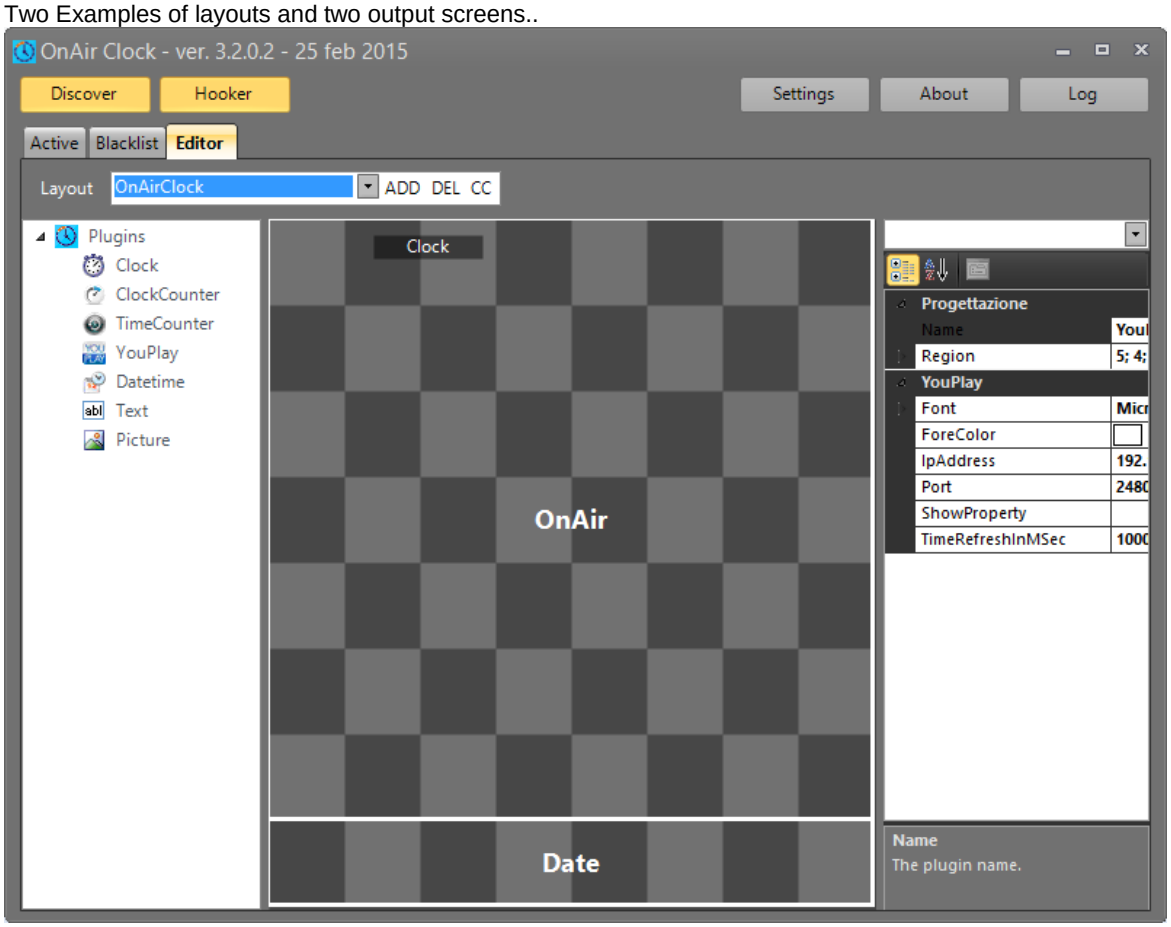

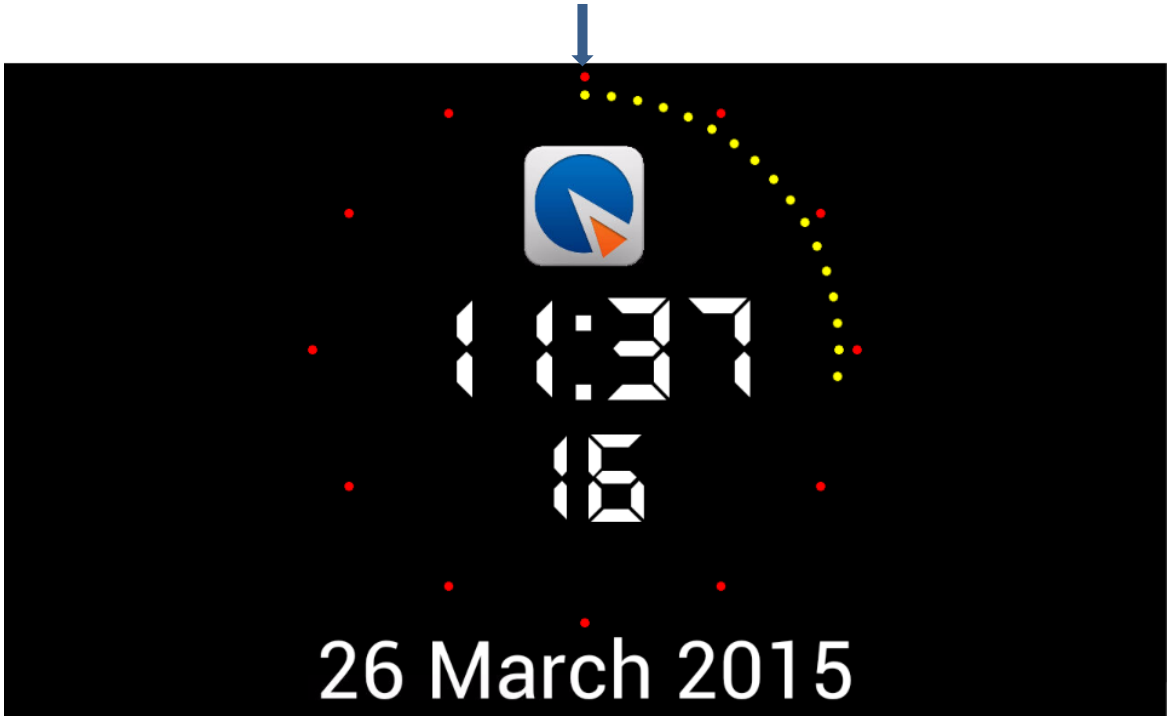

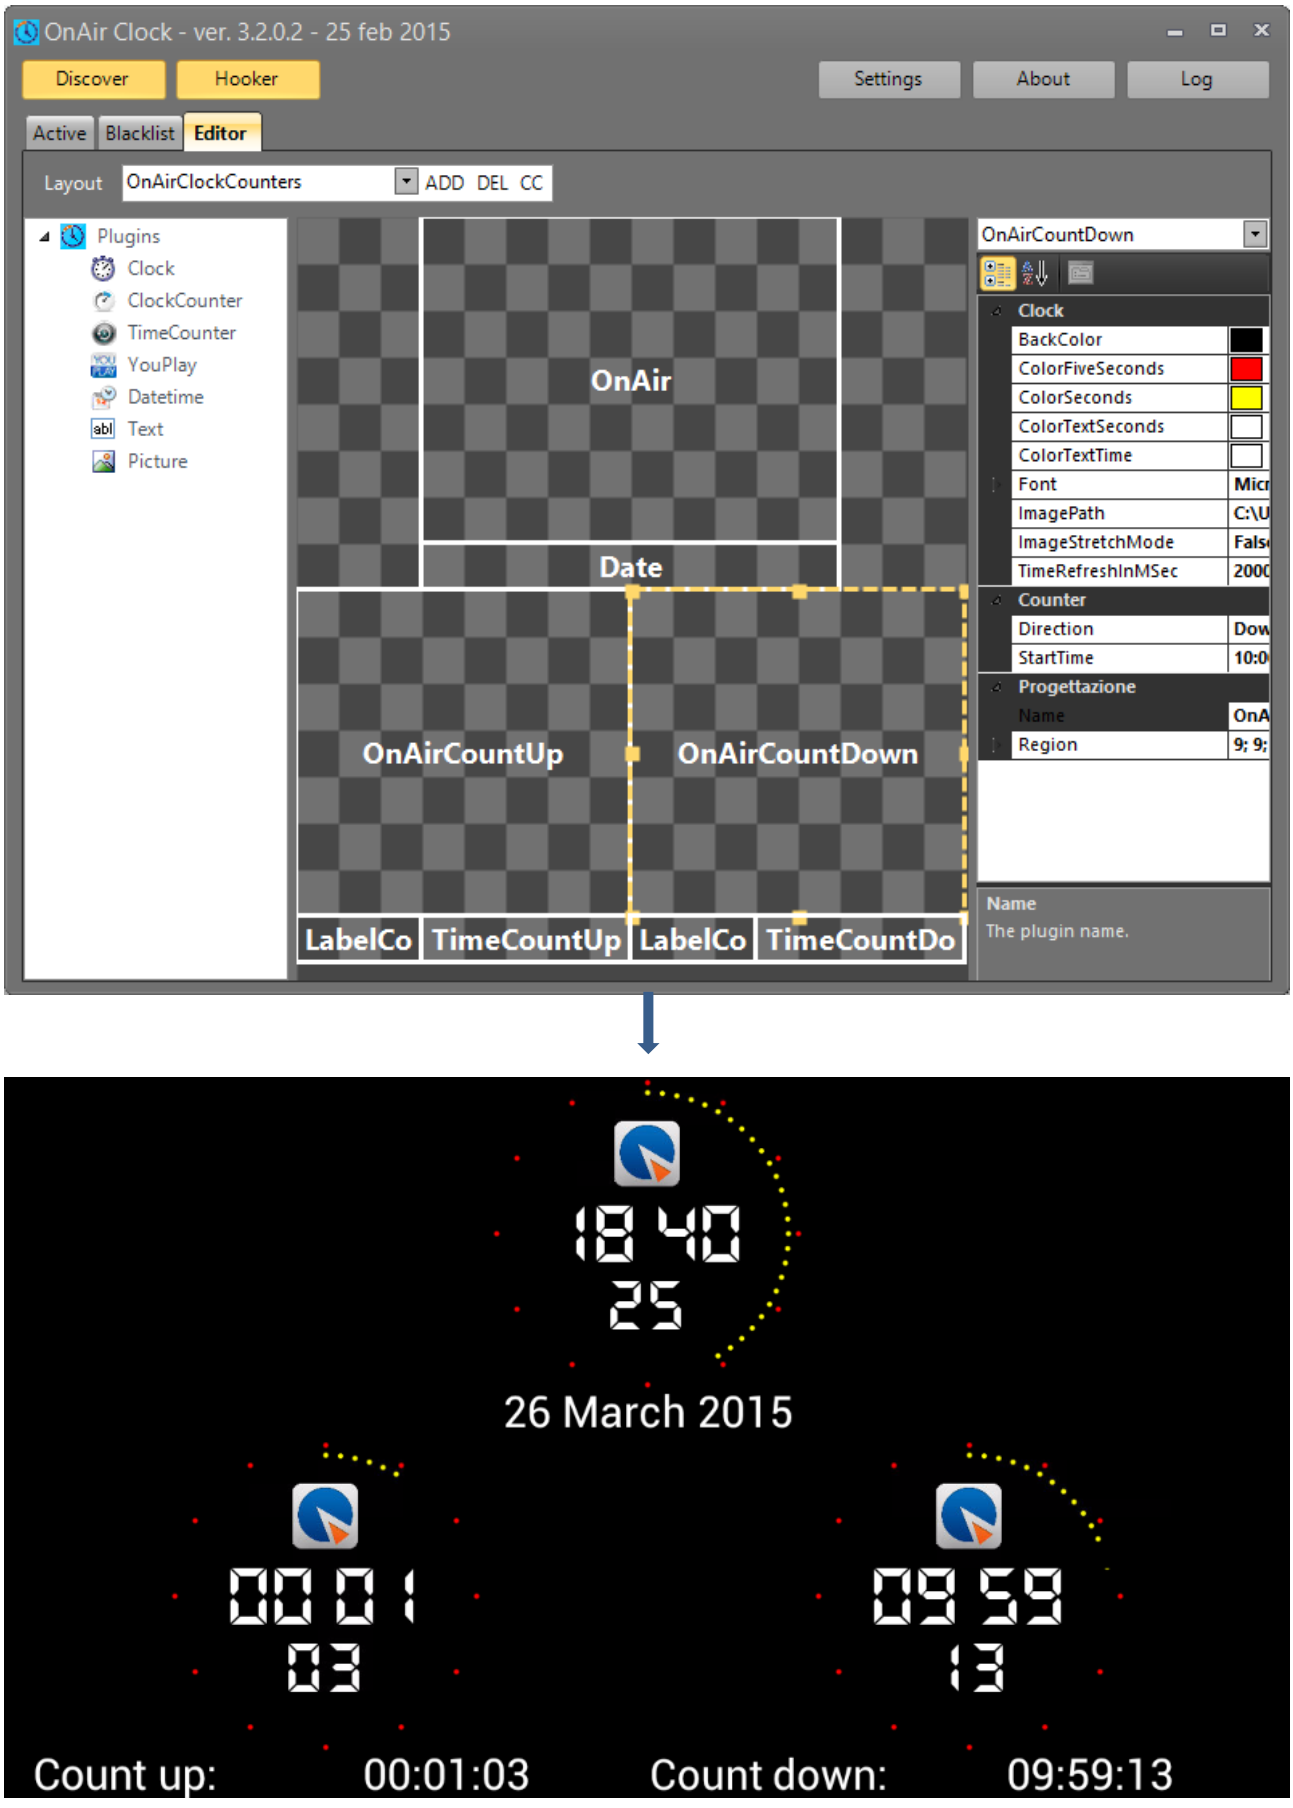
OnAir Clock - ver. 3.2.0.2 - 25 feb 2015
Discover
Hooker
Settings
About
Log
Active
Blacklist
Editor
Layout
OnAirClockCounters
ADD DEL CC
Plugins
Clock
ClockCounter
TimeCounter
YouPlay
Datetime
Text
Picture
OnAir
Date
OnAirCountUp
OnAirCountDown
LabelCo
TimeCountUp
LabelCo
TimeCountDo
OnAirCountDown
Clock
BackColor
ColorFiveSeconds
ColorSeconds
ColorTextSeconds
ColorTextTime
Font
ImagePath
ImageStretchMode
TimeRefreshInMSec
Counter
Direction
StartTime
Progettazione
Name
Region
Name
The plugin name.
18 40
25
26 March 2015
00 01
03
09 59
13
Count up:
00:01:03
Count down:
09:59:13

5 ONAIR CLOCK REMOTER

For each workstation of the network, you can set an OnAir Clock Remoter to have a constant control of messages and counters.

After the installation, run ‘OAC Remoter.exe’.

To show a Message you previously set in the Messages section of the active tab, click on MSG, then click on the button related to the number of the message you want to display on the output screen.

To start with a count, click on COUNT UP, or COUN DOWN, and type the starting time, then click on ENTER. Click again on COUNT UP, or COUN DOWN, and click on the START/STOP button.

6 FINAL CONSIDERATION AND AXEL TECHNOLOGY CONTACT

Main Office BOLOGNA: Via Caduti Di Sabbiuno 6/F
40011 Anzola Emilia - Bologna - Italy
Tel. +39 051 736555 - Fax. +39 051 736170

For Technical information or support
support@axeltechnology.com

For General information and Sales dept
Sales@axeltechnology.com

www.axeltechnology.com